

O₂

o2.co.uk

O2 (UK) Limited, 260 Bath Road, Slough, Berkshire SL1 4DX

Registered in England No. 1743099. Registered Office as above.

© O2 (UK) Limited 2003. Correct at time of going to press (July 2004)



O2C2123N KGL 07/04



O₂ X1i™ – How to use it



Send and receive picture messages



Download pictures and send to your friends



Get the latest sports news



Quick start guide to O₂ X1i™

Introduction

Thanks for purchasing an O₂ X1i. The O₂ X1i has an excellent set of features including an integrated camera, picture messaging, polyphonic ring tones, a 65,000 colour screen, access to O₂ Active and all the other features you'd expect from a phone. In the box, you'll have a handset, battery, a hands-free kit and a charger.

Here are some quick instructions on how to get started. If you need more details, please refer to the detailed sections of the guide:

Setting up

- Insert the SIM into the slot on the back of the O₂ X1i handset, connect the battery and slide on the outer cover
- Check these items are securely in place, then press  until the screen turns on. Then enter a PIN if necessary*
- You're now ready to use the O₂ X1i

Charging the handset

- Insert the lead from the charger to the base of the handset into the charging socket
- Connect the charger to the correct electrical socket. The phone will start charging
- When the phone is fully charged disconnect the charger from the socket and then from the phone

* The default PIN code is 4321 or 5555. If you enter an incorrect PIN code three times in succession, your SIM card will lock and you must enter the PUK code to unlock it. Please contact O2 Customer Service or visit www.o2.co.uk/PUK and follow the instructions.

Basic navigation

Here's how to navigate when using the O₂ X1i.

- Use  to move up, down, left or right
- Press  or  to select an item
- Press  to go **Back** or delete
- Press  to go back to the standby screen

How to make a call


- Type the number of the person you wish to call by using the numbered keypad or press  to select **Contacts** and scroll up and down to find the contact
- Press  to dial the number. Your O₂ X1i will start to dial the number
- After you've connected, press  to end the call

How to create and send a text message

- Press  to enter the text message screen
- You can now start typing your message using the keypad. The O₂ X1i uses ITAP, a predictive text input. Press  to flip through text input options
- Once you've finished typing your text, press  to select **Send**
- Type the number in of the person that you wish to send the text to or select their contact number from your phonebook
- Press  and your message will be sent to the recipient

How to take a picture

- From the idle screen press  to enter the viewfinder mode
- Focus the camera on the picture subject
- Select **Option** to amend the **Quality** and **Mode** of your photo
- Once you're ready, press  to take a picture
- Press  to select **Save** or  to select **Discard** and return to the viewfinder screen and take another picture

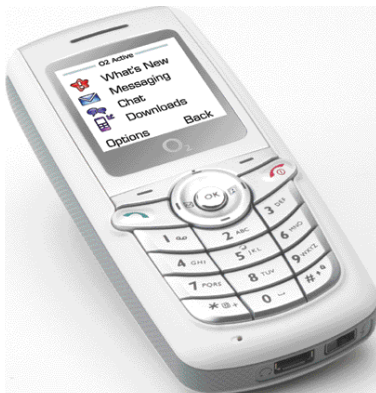

Top tips

- You can assign a picture to a caller's name, so when the contact calls you their photo appears on screen.
See page 40 for details
- To take a picture of yourself, select **Camera** in idle mode, then turn the handset over. The mirror will then act as a viewfinder. Once you're ready to take your picture, press  to capture the image
- You can set a picture as your wallpaper. See page 118 for details
- To access the profiles menu press . For further information on profiles see page 136
- To access O₂ Active press  from the standby screen.
For further information on O₂ Active see page 98
- To lock your keypad, press and hold .
To unlock your keypad, press  to select **Unlock** and then press 

O2 X1i is a trademark of O2 Limited.

Contents

Welcome	xiii
Chapter 1 – Before using your mobile	1
What's in the box	2
Handset description	4
Main display	6
Icons	8
Function keys	10
Navigation keys	12
Chapter 2 – Preparing your mobile for use	15
Inserting your SIM card	16
Using the battery	18
Charging the battery	19
Important battery information	21
Chapter 3 – Basic functions	23
Turning your mobile on and off	24
Menu navigation	26
Basic functions	30
Making a call	30
Ending a call	31
Receiving calls	31
Making an international call	32
Making emergency calls	32
Voicemail	34

Chapter 4 – Main menu	37
Contacts	38
Adding contacts to your phonebook	38
Finding contacts in your phonebook	44
Copy	45
Delete	45
Group	46
Business card	47
My number	47
Memory	47
Calls	49
Missed, dialled and received calls	49
Delete all	51
Duration	52
Call cost	53
Operations during a call	55
In-call menu	57
Messaging	61
Text	61
Multimedia	61
Voicemail	61
Broadcast	62
Memory	62
Text	63
– Write a text message	63
– Read messages	66
– Inbox	68
– Sent items	68

– Drafts	70
– Delete	71
– Settings	71

Multimedia 73

– Create a media message	73
– Read messages	81
– Inbox	83
– Sent items	83
– Drafts	84
– Delete	85
– Settings	85

Camera 87

Camera settings	88
Take a picture	90
Managing your pictures	91
View your pictures	97

O₂ Active 98

How to access O ₂ Active	109
How to close O ₂ Active	109

Games 111

Monkey Mayhem	111
Eda Mouse	113

Media Center 114

Images	114
Ring tones	116
Wallpaper	118

Delete all	119
Memory	119
Tools	121
My services	121
Alarm	122
World clock	124
Calendar	125
Calculator	130
Currency converter	131
Stopwatch	134
Settings	135
Date and time	135
Profiles	136
Display	142
Audio	147
Call settings	148
Network	153
Security	155
Factory reset	161
Chapter 5 – Miscellaneous	163
Abbreviations and acronyms	164
Questions and answers	167
Technical data	171

Chapter 6 – Safety	173
Safety information for mobiles	174
Mobile care	175
Driving safety	179
Electronic devices	180
Other safety guidelines	182
Cautions	183
R&TTE Directive 1999/05/EC	185

Welcome


Thanks for buying the new O₂ X1i mobile – we know you won't be disappointed.

Quite simply your new O₂ X1i is one of the best, most up-to-date ways to stay in touch, have fun, get things done and much more.

As well as a dazzling 65,000 colour screen, your new mobile features an integrated camera, picture messaging, polyphonic ring tones and is also a tri-band handset so you can use your O₂ X1i in the USA and Canada.

You can also access the fantastic O₂ Active™ service using the latest technology. Up-to-the-minute information is at your fingertips wherever you are and whenever you need it*. Access O₂ Active† by pressing and holding  and you can access the following and much more:

- Plan your night out with Time Out
- Download the latest pictures from the O₂ Media Messaging gallery and send them to your friends
- Be the first to hear the latest gossip from the music and movie worlds

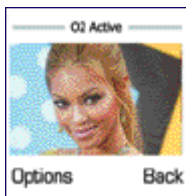

This guide will help you get the most from your new mobile – and all the fantastic features of the O₂ network.

All in all, we're pretty pleased with the O₂ X1i. We hope you feel the same way.

About the user guide

This user guide relates only to the O₂ X1i.

Please note that a small proportion of the functions available differ between Pay & Go and Pay Monthly customers.

O2 do not suggest in any way that the celebrities featured in this guide are endorsing O2 products or services.

* Subject to network coverage.

† Terms and conditions apply. See www.o2.co.uk



Chapter 1

Before using your mobile


- What's in the box
- Handset description
- Main display
- Icons
- Function keys
- Navigation keys

What's in the box

Thank you for purchasing your O₂ X1i. Take a look in the box for the following items. Please check the product contents to see if you have all the available items as shown.



Mobile
phone

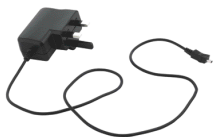

Charger



Battery



Hands-free
kit



Battery
cover



Your O₂ X1i
– How to
use it guide




Handset description

Front view




Back view

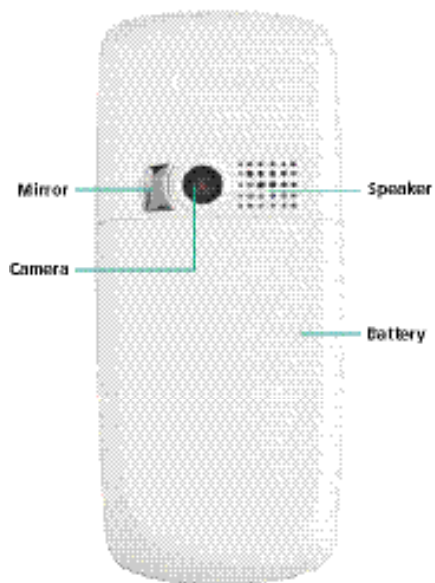

Main display

The main display will show icons for network signal strength, battery power, alarm (if active), the current time and the current profile in use. The screen can also alert you to incoming calls, text messages and missed calls.

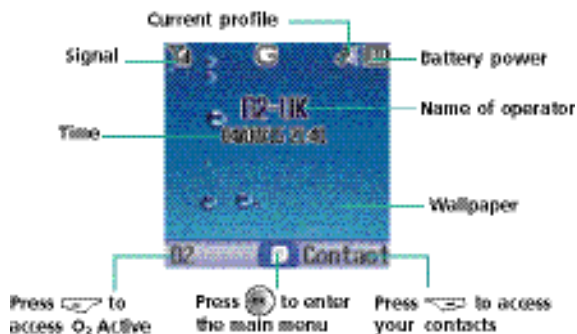

Please note:

- To set the time on the display, please refer to page 135
- Photos taken using your mobile's camera can also be set as wallpapers. Please refer to page 118 for details
- After 30 seconds of inactivity the screen on your O₂ X1i changes from displaying O₂ into 'Sleep mode'. This means that it looks almost black. Your mobile has not turned off but it is in 'Sleep mode'. By tilting your phone, you can see the clock displayed. By pressing any key the mobile's display will start up again. This is normal operation and designed to maintain battery life

Icons

The icons below appear on your mobile's display.



Signal strength – The number of bars shows signal strength



Battery – Current battery charge level



GPRS network – GPRS services have been activated on your SIM card



Message – Shows that a text message or media message has been received or that there are unread messages. If the icon appears in red on the main display then your message memory is full



WAP message – You've a WAP message (This icon will only appear when there are no incoming or unread text and media messages)



Alarm – Appears when an alarm is set



Line in use – Shows the number of the line currently in use



Silent – Appears when vibration is set as a ring tone. In the standby screen, press and hold  to activate the silent profile



Normal – Shows the Normal profile is in use. To set a different profile please refer to page 136



Meeting – Shows that the Meeting profile is in use



Outdoors – Shows that the Outdoors profile is in use



Personal – Shows that the Personal profile is in use



Divert – Appears when the call divert function is active



Roaming – Indicates roaming has been activated (It is not your regular network)

Function keys

Power on/ off key



- Long press to turn your mobile on/off
- Press to reject an incoming call or cancel a call being dialled
- Press to return to the standby screen

Send/ Answer key



- Press to dial or answer a call
- Press to access the list of the last missed/dialled/received calls

OK key



- Press to open up the main menu
- Press to select when browsing through the menu

Left soft key



- To access O₂ Active
- Press to select when browsing through lower menu levels from standby mode

Right soft key



- Press to access your contacts
- Press and hold to turn the silent profile on or off
- Press to delete entered digits

Navigation key



- To browse through the menu

Asterisk key



- To insert an asterisk
- Press and hold to select +

Voicemail



- Press and hold to access your Voicemail

key



- To insert #
- Press, when creating a message, to access predictive text (ITAP) or manual text input
- Press and hold to activate the phone keypad lock

Alphanumeric keys



- Press to enter a digit
- Shortcut keys – press and hold to immediately access a function

Navigation keys

When in standby mode, the navigation keys can be used to access shortcuts we have set up for you.



Left – To create a text message




Right – To access your profiles



Up – To access the main menu



Down – To access the camera function

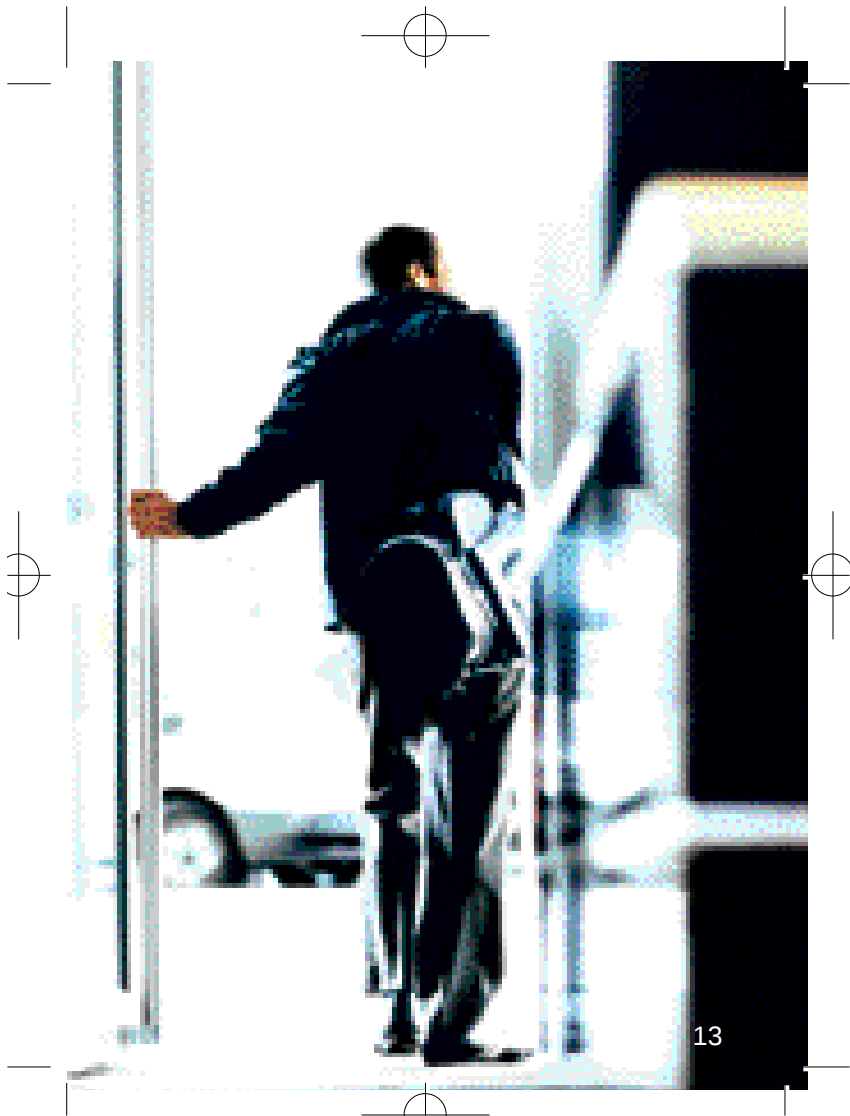



Chapter 2

Preparing your mobile for use


- Inserting your SIM card
- Using the battery
- Charging the battery
- Important battery information

Inserting your SIM card

To use your mobile, a SIM card is required at all times – this contains important information about your mobile and network. The message **Insert SIM** appears when the SIM card is not installed.

Please take care of your SIM card and don't keep it near magnetic and electronic devices as this can interfere with data storage and network operations.


- Turn your mobile over and slide the cover off
- Release the battery latch and lift the battery off the mobile

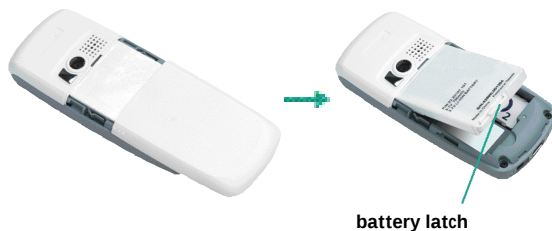

Please note:

Do not remove the battery when the mobile is on. Doing so could cause you to lose personal settings or data stored either on your SIM card or in the mobile's memory.

- Slide the SIM card in under the metal grooves in the SIM card slot, with the SIM card's metal contacts facing down and the cut corner at the top left

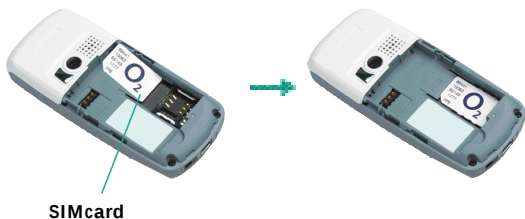

Please note:

A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it.


If you wish to remove the SIM card, you must first press down the stay, then push the SIM card out of the slot.



Using the battery

Installing the battery

Insert the bottom of the battery into the groove at the top of the mobile. Push down the battery until it locks into place and then slide the cover back on.

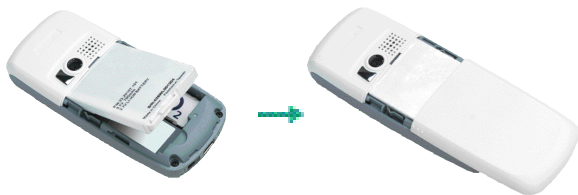

Removing the battery

Slide the cover off. Push the battery latch inwards and then lift the battery to separate from the mobile.

Please note:


The battery must be securely placed in the battery compartment. If the battery is improperly inserted your mobile will not turn on.

Charging the battery

Power connection

Insert the charger's contact point into the slot and plug the charger in at the socket.

Please ensure you insert the charger the right side up.

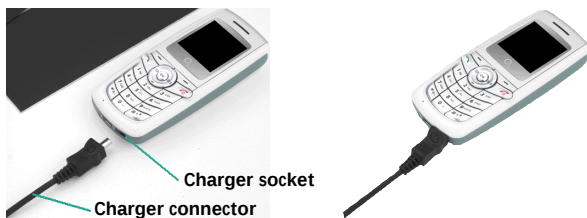

Please note:

Before you use the battery for the first time, make sure you charge it for at least four hours. Charging the battery fully each time will help prolong its lifetime – and is much better than frequent short bursts of charging.

Charging status

If you charge your mobile;

- whilst it is turned off, the main display shows the following animation




- whilst it is turned on, the display shows the  icon. The lines showing the battery power will scroll until the battery is fully charged

When the battery is out of power, your mobile will play an alert sound to remind you to recharge it and will eventually turn off automatically.

Important battery information

- Do not remove the battery while your mobile is charging
- Do not over charge the Li-Ion battery, as this can result in a reduction in battery performance and life span. The recommended maximum charge time is 6-8 hours
- Never store a battery near a fire
- Don't attempt to take the battery apart. Only use the battery approved by the manufacturer
- Never touch the battery terminals with a metallic object, as this can lead to short circuiting. Take special care when carrying a battery in your pocket
- Misuse of the battery can lead to burns from hot temperatures and even explosion. Never drop or apply any physical shock to the battery as it may damage the battery and even cause fire
- Please keep your battery out of children's reach and in a dry and cool area
- Store and charge your battery at room temperature. Extremes of temperature can prevent full charging and affect battery life and performance
- Since a battery is a consumable product, the operating time will gradually decrease through use
- Keep the terminals of the battery clean and dry
- When there is risk of lightning, remove the charger's plug from the socket to protect the mobile

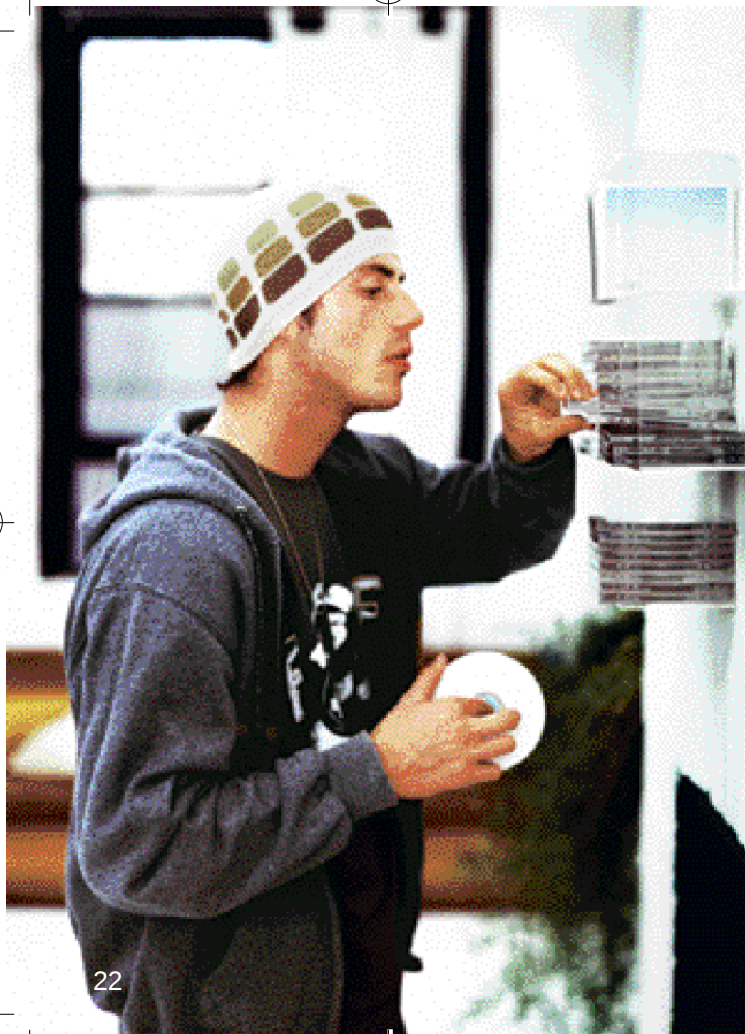


Chapter 3

Basic functions

- Turning your mobile on and off
- Menu navigation
- Basic functions
- Voicemail

Turning your mobile on and off

Turning your mobile on



When the SIM card is installed

- Press and hold  until the screen turns on
- When your mobile is PIN protected, **PIN1 Code** is displayed on the screen*
- Enter the 4-digit PIN to unlock the mobile, then press 
- Your default PIN code is **4321** or **5555****
- You can now use your mobile


Please note:

If you enter an incorrect PIN code three times in succession, your SIM card will lock and you must enter the PUK code to unlock it. Please contact O₂ Customer Service or visit www.o2.co.uk/PUK and follow the instructions.

* If you have purchased a Pay & Go mobile, entering a PIN number is not required.

** Please see page 155 for further information on PIN codes.

Turning your mobile off



When the SIM card is installed

- Press and hold  until the screen turns off

Please note:

- If the message **LOW BATTERY WARNING POWER OFF** is displayed, the mobile will turn itself off. You will need to charge the battery
- If the battery is removed whilst the mobile is on, any unsaved messages could be lost and the SIM card's memory might be damaged

Menu navigation

- When your mobile is in standby mode, press  to access the main menu
- Scroll to the menu icon you require by using 
- Press  to enter the menu icon highlighted

The main menu item to which you have scrolled will be displayed as an animation.



The name of the main menu item you have scrolled to.



Each icon represents a sub-menu.

- Press  to go back or press  to return to the standby screen

Main menu map

Select	To enter
 Messaging	
 O₂	 
 Calls	 


Select	To enter
 Contacts	 
 Camera	
 Games	

Select	To enter
 Media Center	
 Tools	  Pay &Go customers will see My Services as item number 1.
 Settings	 

Basic functions

Making a call

- Ensure that the standby screen is shown on the display
- Enter a phone number
- If you make a mistake while dialling, you can erase the last number you entered by pressing the clear key 
- Once you have entered the number, press . The O₂ X1i will start dialling the number



Ending a call

- Press  to end a call

Receiving calls

Answering a call

- To answer a call press 

To reject a call

- You can reject an incoming call by pressing 

Making an international call

For Pay Monthly customers

- Press and hold  until + appears on the screen
- Enter the recipient's country code, area code and phone number
- Press  to dial the number



For Pay & Go™ customers

Please consult your O₂ Pay &Go welcome pack for details on how to use your mobile whilst abroad.

Making emergency calls

- To call emergency services, enter **112** (the international emergency number) or **999**
- Then press  to dial the call

You can make an emergency call even if your mobile is locked or cannot access your network, or there is no SIM card inserted, so long as you are within range of a network of the type supported by your mobile.

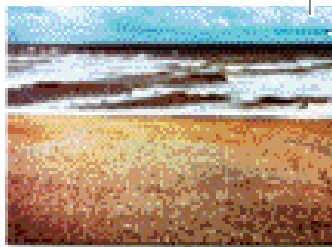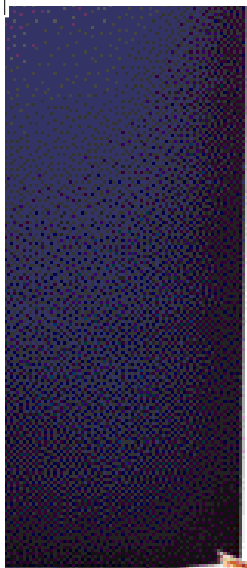

Voicemail

Your O₂ X1i provides you with Voicemail if your Voicemail is activated. See your O₂ Welcome Pack for more information on setting up Voicemail. This service takes messages for you when your O₂ X1i is switched off, engaged, you don't answer a call or you are out of signal range.

To listen to your Voicemail message

- In the standby mode, press and hold  to dial your Voicemail
- Alternatively, simply dial **901** and press 





Chapter 4

Main menu

- Contacts
- Calls
- Messaging
- Camera
- O₂ Active
- Games
- Media Center
- Tools
- Settings



Contacts

From the standby menu, press  then scroll to **Contacts** and press  to select. Alternatively, press  to access your contacts.

Adding contacts to your phonebook

You can either use the SIM card or the built-in contacts database as your Phonebook. Your mobile is set up to save to your mobile's memory. You will however be given the option to save to your SIM card when saving a contact.

The phonebook in your mobile's memory can store up to 500 contacts.

To add a contact to the phonebook

- In the standby screen enter the number you wish to store then select  to **Save**
- The screen will show the phonebook data fields for a new contact
- Scroll through the contact data fields that you wish to edit
- Select to edit the field by pressing  and enter the relevant data
- To save press  to select **Option**, then scroll to **Save** and press  to select



The data fields provided by the phonebook are:

 Name

The contact's name

 Other number

The contact's default phone number

- To change the category of the phone number, press  to select **Option**, then select **Change Type** and select either **Mobile Number**, **Home Number**, **Office Number** or **Other Number**

 Home number

The contact's home phone number

 Group

Used to select a caller group for the contact

- Select to edit the field by pressing 
- Scroll through the different groups available and press  to confirm
- When there is an incoming call for this contact, the ring tone assigned to this group will sound and the display will show the animation/image associated with the group

Please note:

To set a ring tone and animation/image for each caller group go to **Contacts – Group**.

Ring ID

To set a ring tone for the contact. When there is an incoming call from the contact, your mobile will play this ring tone

- Press , then scroll through the ring tones available and press  to select

Please note:

- The ring tone in this field will replace the one associated with the contact's caller group, if any
- The ring ID is only available when you save a contact to your phone's memory

Image ID

To set the image, photo or wallpaper that will appear on your mobile's display when there is an incoming call from the contact

- Press , then select;
- **New photo** – to take a new photo of the contact. For further information on taking photos please refer to the **Camera** section on page 87

- **Images** – select an image that is already stored on your mobile
- **Wallpaper** - Select a wallpaper/animation that is already saved on your mobile

Please note:

- The photo/image/wallpaper set in this field will replace the image associated with the contact's caller group
- The image ID is only available when you save a contact to your phone's memory

In addition to the contact fields above you can also add the data fields listed below by pressing  to select **Option** at any time and then selecting **Add New Field**:



Mobile number

The contact's mobile number



Home number

The contact's home phone number



Office number

The contact's office phone number

 Other number

An alternative number for the contact

 Email

The contact's email address

 Home address

The contact's home address

 Office address

The contact's office address

 Company

The contact's company name

 Department

The department in which the contact works

 Position

The position the contact holds within the company

 Note

Used for notes about the contact



Finding contacts in your phonebook

- In the standby mode, press  to select **Contacts**
- Press  to scroll through your list of contacts until the one you need is highlighted
- Alternatively, press the alphanumeric key that corresponds to the first letter of the name you wish to locate, the appropriate number of times e.g. If the name starts with 'K', press  twice. The names that begin with 'K' will appear. Press  until the one you need is highlighted
- Press  to call the first phone number saved under that contact



If the contact has multiple phone numbers:

- Press  to show all the data fields for that contact
- Scroll to the number you wish to call and press 

Copy

If you are using the phonebook stored in your mobile's memory, you can copy the data to the SIM card's phonebook, and vice versa.

- In the **Contacts** menu, scroll to **Copy** and press  to select
- Then scroll to a contact to copy to the other phonebook or scroll to **All SIM to Phone** or **All Phone to SIM** and press  to select
- Press  to select **Yes** and confirm

Delete

- In the **Contacts** menu, scroll to **Delete** and press  to select
- If the contacts you wish to delete are saved to your SIM phonebook scroll to **All in SIM** or alternatively **All in Phone** otherwise select a particular contact and press  to select
- Press  to confirm deletion

Group

Caller groups are combinations of phone settings used to identify a particular group of contacts, such as, **Colleagues**, **Family**, **Friends**, **VIP** and **Others**. You can associate a ring tone and image with one group, and when a member of that group calls, your mobile will use the group's ring tone and display its image.

- In the **Contacts** menu, scroll to **Group** and select by pressing 
- Scroll to one of the groups and then;
 - Press  to select **Option**. You can then select the ring tone or image that will identify that caller group. You can also rename the caller group and view all the associated details for that group
 - Press  to view a list of all the names that belong to that caller group. Scroll to the desired contact and press  to select **Option**. You can then **Edit**, **Remove** or **Add** a particular contact from/to that group



Business card

You can use this option to enter your own business card information.

My number

This option allows you to save your SIM card number and name to your SIM card's memory.

Memory

- In the **Contacts** menu, scroll to **Memory** and select by pressing 

You can now view the number of occupied phonebook entries both on your SIM card and mobile memory as well as the maximum number of entries that your mobile can store.





Calls

- From the standby menu, press  then scroll to **Calls** and press  to select

Missed, dialled and received calls

- Scroll to **Missed / Received / Dialled** and press  to select. You can then view all the latest missed, received or dialled calls. Alternatively, in the standby mode, press  to view a list of all the most recent missed, dialled and received calls
- Press  to scroll to the desired phone number



– this icon will appear beside missed calls



– this icon will appear beside dialled calls



– this icon will appear beside received calls

Please note:

- If a phone number has already been stored as a contact in your phonebook, the display will show the name of this contact
- If the number of the person calling you is not available then the list will not show a number for the call

When the number for a missed, dialled, or received call is highlighted, you can perform the following tasks:

- Press  to view the time, date and telephone number* of the call



- Press  to re-dial the number
- Press  to select **Option** and bring up a pop-up menu:
 - Save/Edit** – if the phone number for the call has not been stored in the phonebook you will be able to create a contact for this number. If the phone number is already stored as a contact you will be able to edit the information for this contact
 - Delete** – select to erase the record of the call from the list
 - Call** – select to call the number or contact listed

* If the telephone number has been withheld, the number will not be displayed.

Send msg – select to send a text message or media message to the number or contact listed. For further information on sending text or media messages please refer to the **Messaging** section on page 61

Delete all

Select to erase all call records.

- In the **Calls** menu, scroll to **Delete** and press  to select
- When prompted press  to select **Yes**, or  to select **No** and return to the Calls menu

Duration

Here you can view the duration of the calls you have made.

Last call time

Shows the duration of your last call, as well as the contact name or phone number.

All calls time

Shows the total time for all calls.

Received call time

Shows the total time for all received calls.

Dialled call time

Shows the total time for all dialled calls.

Reset

Allows you to reset all call time records to zero.

Please note:

You must enter your PIN2 code in order to clear call time records. The PIN2 is the second PIN code. Its main use is to control restricted services e.g. call time limits and restricted phone numbers. For further information about PIN2 code, please refer to page 155.

Call cost*

Here you can view the cost information for calls.

Last call cost

Shows the costs of your last call, as well as the contact name or phone number.

All calls cost

Shows the total cost for all calls.

Reset

Enables you to reset the call cost to zero. You will need to enter your PIN2 code to complete.

* Not available to Pay &Go customers.

Call cost limit

Shows the current limit set for total call costs.

Set call cost

Call cost limit

Allows you to set a limit for total call costs. If call costs exceed this limit, your mobile will no longer be able to dial calls. When this feature is activated, the remaining cost will be displayed in the information box on the screen each time you end a call. To set your call cost limit you will need to enter your PIN2 code.

Units

Allows you to enter the unit price and a currency for calculating call costs. To set the unit price you will need to enter the PIN2 code.

Operations during a call

Adjusting the earpiece volume

- During a call, you can press  and  to adjust the call volume

Mute

- Press  to select **Mute** and turn off the microphone. The person on the other end of the line will not be able to hear your voice
- To restore the microphone's function, press  to select **Unmute**

Making a second call*

To make a second call:

- Enter a phone number, or select one from your contacts. For further information please refer to the In-call menu on page 57
- Press  to dial

The currently active call will automatically be placed on hold. However, if there is already an active call and another on hold, this action will fail.

* Only available on a Pay Monthly calling plan.

Call waiting*

If you receive an incoming call whilst you are on the phone, a tone will sound through the earpiece and the display will show that a second call is currently waiting.

You can handle the waiting call and currently active call in the following ways:

Answer the waiting call

- Press . The currently active call will automatically be placed on hold
- However, if there is already another call on hold, a menu will appear on the display allowing you to select a call to end and then answer the waiting call

Reject the waiting call

- Press  to select **No**

* Only available on a Pay Monthly calling plan.

In-call menu

- Press  during a call to select **Option** and enter the **In-call menu**
- Press  to scroll to the desired item, please refer to the list below

Hold/Unhold/Swap*

Allows you to toggle the call status.

Contacts

Select to enter the contacts menu.

Calls

Select to view the recently dialled, missed or received call list. You can then press  to select **Option** and enter the calls menu.

* Only available on a Pay Monthly calling plan.

Messaging

Enables you to enter the messaging menu. For further information on the messaging menu please refer to page 61.

Calculator

Enables you to enter the calculator tool. For further information please refer to page 130.

Send DTMF

When your mobile is connected to other devices or services, you can send DTMF (Dual Tone Modulation Frequency) strings. DTMF strings are keypad tones that can be sent via the microphone as you dial another number. Your mobile will emit the tones in order to communicate with answering machines, pagers, computerised telephone services, and so forth.

- Enter the phone number and then press  to send the DTMF string

End call

Press  to end the current call.

Please note:

If you have a call on hold you can choose to end all calls, end the active call or the call on hold or just a single call.

Mute/Unmute

This allows you to activate or cancel the silent mode.





Messaging

- In the main menu, scroll to **Messaging** and select by pressing 

Then select;

Text

For further information on text messaging please refer to page 63.

Multimedia

For further information on Media Messaging please refer to page 73.

Voicemail

- Scroll to Voicemail and press  to select

Get voicemail – select to call your Voicemail number

Settings – select to amend your Voicemail number

For further information on Voicemail please refer to page 34.

Broadcast

Cell Broadcast (CB) provides you with messages about your O₂ service. Details are available from O₂. When you receive a CB it will display automatically in the display.

Please note that Cell Broadcast is not available to Pay & Go customers. Charges may apply for customers using CB. For more information please contact O₂ Customer Service.

Memory

- Scroll to **Memory** and press  to select and view how much space is still available



Text

Text messaging is fun with your O₂ X1i. You can send long messages, and personalise them.

- In the main menu, scroll to **Messaging** and select by pressing , then select **Text**

Please note:

To enter the text messaging screen directly from the standby display screen, press 

Write a text message

- In the Text menu select **New**
- Enter your text message using the alphanumeric keys.
Your message can be up to a maximum of 456 characters. One standard text consists of 160 characters

Please note:

- Press **0** to enter a space between words
- Press **#** to switch between input modes e.g. abc, itap, 123 etc.
- The O₂ X1i uses ITAP, which is a predictive text input method. ITAP allows you to type text quickly

- Press * to bring up options to insert characters such as ?, !, & and @. Using the navigation keys, scroll to the character you would like to insert and press  to select

To send your text message

- After you have finished editing your message, press  or  to select **Send**

Send

- In the **To:** screen enter the recipient's mobile number when prompted or press  to select **Contacts** and select a contact from your phonebook
- Scroll through the list of contacts and press  to select the desired contacts
- Once you have selected all the contacts you require press  to select **Done**
- Press  to send your text message

Save to draft

Save your message to the Drafts folder so that you can send at a later time.

Discard

To delete the text message.



Read messages

When you receive a new message **1 New SMS** will appear on the display with a tone or vibration if selected.

Please note:

If the sender is a contact saved in your phonebook their name will also appear in the message alert rather than the number – so you know who sent you the message before you open it.

- Press  to open the message and read it
- Select **Option** by pressing  , then select either:

Reply – to reply to the text message

Forward – to forward the text message

Call – to call the sender of the text message

New – to create a new text message

Delete – to delete the text message

Save sender info – select to save the content of the message, such as the sender's number to your phonebook or ring tone, animation and calendar attachments

If you wish to read the message later press  to return to the standby screen. The message will be stored in the inbox and the  icon will appear in the standby screen.

Inbox

- In the **Messaging** menu, select **Text**, then scroll to **Inbox** and select by pressing 
- You are now in the inbox.  indicates a read message, while  indicates an unread message
- Select the desired message and press  to read
- To return to the main menu press 

Sent Items

In the Sent Items you can view all the text messages that you have previously sent.

- In the **Messaging** menu, select **Text**, then scroll to **Sent Items** and select by pressing 
- Scroll to the desired message record

Then you can:

- Press  to select **Option** and then select:
 - Delete** – deletes the message
 - Resend** – allows you to edit and send the message to its original recipient
 - Forward** – allows you to edit and forward the message to other recipients
 - Delete All** – deletes all the messages in your outbox
- Press  to read the message. After reading the message, press  to select **Option** and then select:
 - Delete** – deletes the message
 - Resend** – allows you to edit and send the message to its original recipient
 - Forward** – allows you to edit and forward the message to other recipients

Drafts

This option allows you to preserve message drafts that you have saved.

- In the **Messaging** menu, select **Text**, then scroll to **Drafts** and select by pressing 
- Scroll to the desired message record

Then you can:


- Press  to select **Option** and then select;
Delete – deletes the message
Delete All – deletes all messages in the drafts folder
- Press  to directly edit the contents of the message

Delete

You can delete messages saved in your Inbox, Sent Items, Drafts or All.

Settings

Your O₂ X1i is already set up to send and receive text messages. If you are unable to send text messages, then please contact O₂ Customer Service.

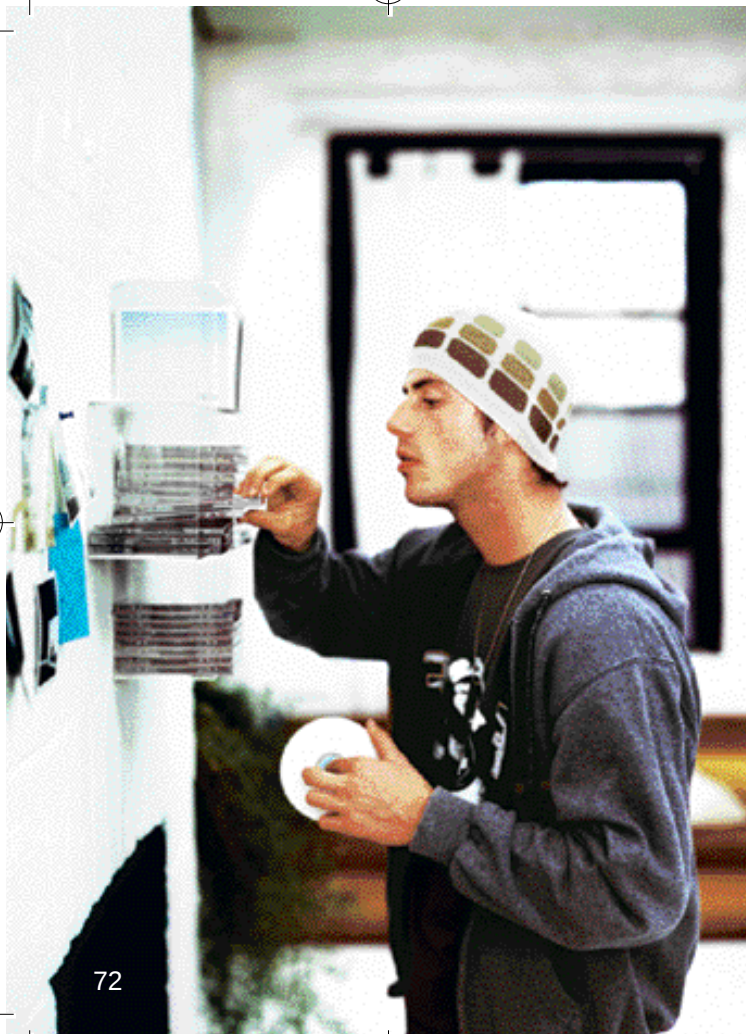



Multimedia

Colour Media Messaging means you can do more than tell people what's going on – you can show them exactly what's happening with pictures, sound and text. Take a photo and send it as a media message to people showing them exactly where you are or, if you are in need of inspiration, you can grab a full colour picture or image from the O₂ Gallery – such as celebrity shots and greeting cards (see O₂ Active on page 98) and send it with your own message to people.

- In the main menu, scroll to **Messaging** and select by pressing , then select **Multimedia**

Create a media message

- In the Multimedia menu select **New**

Select the recipient(s)

You can send your media message to a recipient's mobile or email address.

- Scroll to **To:** and press  to select

To enter a number of email address directly

- Type in the recipient's phone number or email address

If there are multiple numbers and email addresses:

- Press  to open up the symbols field along the bottom of the screen
- Press  to select a comma, semicolon, or space
- To insert into the editing screen and separate the different numbers and email addresses press 

To select a number or email address from your phonebook

- Press  to select **Contacts**
- Scroll to highlight the name of the desired contact
- Press  to mark the number(s) or email address(es) you want
- You can then repeat the same steps to select other contacts from your phonebook
- When you have finished press  to select **Done** and return to the recipient list, displaying all the phone numbers and email addresses you have chosen

To send your message as a carbon copy or a confidential carbon copy to others scroll to **Cc:** or **Bcc:** and repeat the instructions above.

Content

- Scroll to **Content:** and select by pressing 
- Enter your message using the alphanumeric keys

For further information on entering text please refer to page 63.

With an attachment

- Whilst writing your message, select **Option** by pressing 
- Select **Insert** to enter the following:

New photo

Enables you to take a new photo using your mobile's camera and insert it into the media message you have opened. For further information on using the camera please refer to page 87.

Photo

You can select a photo that you have previously saved to your **Images** folder. For more information on the camera please refer to page 87.

- Scroll to the file name of the desired photo
- Press  to view and press  to insert the photo into your media message



Text

Your mobile has a list of templates that can be used instead of entering the text message yourself.

- Scroll through the templates available and press  to insert into your media message

Enter a subject

- Scroll to **Subject:** and select by pressing 
- Enter the subject for your media message and press  to confirm

When you are editing your media message, you can press  to select **Option** at any time to perform the following tasks:

Preview – plays all the pages you have created in sequence

Remove image – removes an image or photo from the currently displayed page

Remove text – deletes all of the text from the current page

Slide duration – allows you to set the length of time that each page is displayed on the screen when playing your media message

When you have completed all the fields required to send your media message, scroll to **Send** and press  to select or press  to select **Option** from the **New** screen and choose from the following:

Send – to send your media message select by pressing 

Save to draft – saves the media message to the Drafts folder so that you can send at a later time

Preview – enables you to view your media message before you send it

Discard – select to delete the media message



Read messages

When you receive a new message **1 New Msg** will appear on the display with a tone or vibration if selected.

Please note:

If the sender is a contact saved in your phonebook their name will also appear in the message alert rather than the number – so you know who sent you the message before you open it.

- Press  to open and play the message's pages in sequence

Whilst playing you can perform the following tasks:

- Press  to select **Pause**. When the message has stopped, you can press  to select **Play** and resume playing the message starting with the currently displayed page. Alternatively, press  to scroll to the page you want to view and then press  to select **Play** and resume playing the message starting with that page
- Press  to select **Stop**

When your mobile finishes playing the entire message, you can do the following:

- From the message's last page press  to replay the last page. If you want to replay the other pages, you must return to the first page using  and then press  to start
- Press  to select **Option**, then select:
 - Reply** – to reply to the media message
 - Delete** – to delete the media message
 - Call** – to call the sender of the media message, or dial a phone number in the contents of the message. Scroll to the desired number and press  to dial
 - Forward** – allows you to edit the content and then forward to someone else
 - Details** – to view the date and time of when the media message was sent
 - Save** – enables you to save the sender's phone number to your phonebook, or save a number that was displayed in the message's content. You can also select the contents of a media message and save to your mobile's memory, such as an image, photo or ring tone
 - Save all** – saves all the objects attached to the message

If you wish to read the message later press  to return to the standby screen. The message will be stored in the inbox and the  icon will appear in the standby screen.

Inbox

- In the **Messaging** menu, select **Multimedia**, then scroll to **Inbox** and select by pressing 
- You are now in the inbox.  indicates a read message, while  indicates an unread message
- Select the desired message and press  to read
- To return to the main menu press 

Sent Items

In the Sent Items you can view all the media messages that you have previously sent.

- In the **Messaging** menu, select **Multimedia**, then scroll to **Sent Items** and select by pressing 
- Scroll to the desired message record
- Press  to read the message

Drafts

This option allows you to preserve message drafts that you have saved.

- In the **Messaging** menu, select **Multimedia**, then scroll to **Drafts** and select by pressing 
- Scroll to the desired message record

Then you can:

- Press  to select **Option** and then select;

Delete – deletes the message

Delete All – deletes all messages in the drafts folder

- Press  to directly edit the contents of the message

Delete

You can delete messages saved in your Inbox, Sent Items, Drafts or All.

Settings

Your O₂ X1i is already set up to send and receive media messages. If you are unable to send media messages, then please contact O₂ Customer Service.





Camera

You can take photos using your mobile's integrated camera, and then set a photo as your wallpaper for the display's standby screen, or send them to others in a media message.

- In the standby screen, press  to select **Camera** and enter directly into the preview mode

Alternatively, in the main menu, scroll to **Camera** and press  to select.

- You can now view your subject through the viewfinder



Camera settings

Before you take your picture you can amend the camera settings.

- Press  to select **Option**
- In the camera setting screen select;

Quality

Select to set the desired resolution quality for your photograph. Select from **High**, **Medium** or **Low**.

Mode

Amend the mode to suit the light conditions of your environment in which you are taking the picture. Your camera will then adjust automatically in order for you to take the best quality pictures.

Select between **Automatic**, **Indoor**, **Outdoor** and **Night**.




Images

Select to view the images you have saved.

Memory

Select to view the amount of memory remaining for storing photos.



Take a picture

- When your object is in focus, press  to photograph the object



Please note:

To take a picture of yourself, turn your mobile over and use the mirror as the viewfinder.

Your photo will then show up on the main display.

- Press  to select **Save**. Your photo will be saved to **Media Center – Images**
- If you are not satisfied with your photo, press  to select **Discard**

Please note:

- When taking photos, do not block or touch the camera lens
- Always photograph your object with the source of light behind you
- Do not shake your mobile when taking photos
- Please be sure that the lens is perfectly clean before taking photos. Use a soft cloth to wipe the lens if it is not clean

Managing your pictures

- After you have saved your photo you'll be presented with the Store Options screen. From here you can choose from the following:

Send

Enables you to send this photo to someone as a media message. You can also send a media message by entering **Messaging – Multimedia**. For further information on Media Messaging please refer to page 73.

Delete

Select to delete the image.

Rename

Select to give your photo a new file name.

Save to contacts

Enables you to save a photo to one of your contact's details. Once completed, when the contact calls you their photo will appear on the screen.

- Scroll to and select **Save to Contacts** by pressing 

New Contact

- If the contact's details are not already stored in your mobile, scroll to **New Contact** in the Image ID screen and select by pressing 
- You can then complete the following details:

 **Name** – Select **Name** by pressing  and then enter the contact's name

 **Other Number** – To enter their contact number scroll to **Other Number** and press  to select and then enter the details

Please note:

You can also assign the number to a mobile, office or home number.

- Scroll to **Other Number** and then press  to select **Option**, then select **Change Type**
- Scroll to either **Mobile Number**, **Home Number**, **Office Number** or **Other Number** and select by pressing 
- You can then enter the relevant details by following the instructions in Other number above



- Scroll to the image file name and press OK
- You can then take a new photo for the image ID, or assign an image you have previously taken or one of your saved wallpapers

Please note:

- For further information on taking a photo please refer to page 87
- For details on changing the file's name please refer to page 91

When completing the contact's details above you can select **Option** from the To Phone screen at anytime and select:

Save – to save the amended details

Add new field – you can add an additional field such as different telephone numbers, email, home and office address, company name, department and position.



Mobile number – select to enter the contact's mobile phone number



Home number – select to enter the contact's home phone number



Office number – select to enter the contact's office phone number



Other number – select to enter another number you would like to save to that contact



Email – select to enter the contact's email address



Home address – select to enter the contact's home address

-  **Office address** – select to enter details of the contact's office
-  **Company** – select to enter the company name
-  **Department** – select to enter details of the department where the contact works
-  **Position** – select to enter the contact's position within the company
-  **Note** – select to enter additional details regarding the contact
-  **Group** – select to assign the contact to a particular group, such as **Colleagues**, **Family** or **Friends** etc. For further information on Groups please refer to page 46
-  **Ring ID** – select the ring tone that will be played when this particular contact calls

Delete field – select to delete a particular field that is not required for this contact

Set as wallpaper

Designates this photo as the wallpaper for the display's standby screen. You can also do this by going to **Settings – Display – Wallpaper**. For further information on Wallpaper please refer to page 118.

Details

Select to view the photo's name, date, resolution and file size.

View your pictures

Pictures that you have previously taken will be saved to **Media Center – Images**. For further information on viewing your images and the Media Center please refer to page 114.

O₂ Active™

Your new mobile has a WAP browser, which enables you to access O₂ Active and other Mobile Internet services.

O₂ Active

Get ready for the bigger, brighter, vibrant world of O₂ Active*.

This is your world, where you can download your favourite tunes, or share your day with friends with full colour images and quality sound.

98

picture messaging downloads chat music sports

It's where the sports news and entertainment gossip you care about is sent straight to your mobile, and where finding the fun is easier with info on movies, gigs and great events happening near you.

Change your world. There's so much you can do with O₂ Active.

* Terms and conditions apply to O₂ Active. Please visit www.o2.co.uk for details. O₂ Active is a trademark of O₂ Limited. Services are handset and network dependent.





What's new?

Here's where to head for to get into anything new in the world of O₂ Active. You'll also find the latest competitions that could win you fantastic prizes.



Messaging

Now you can show your mates exactly what's going on – in full colour. With O₂ Active, it's easy. Create and send unique messages by shooting photos and adding text and sound.

You can even send someone a photocard*. Just take a picture on your mobile, text it to 61234 and we'll deliver it straight to the letterbox! You can download images from the O₂ Active online Gallery, as well as store your own messages, pictures and photos. Plus get essential Picture Alerts** such as sports, entertainment gossip and babes or male models of the day.



* Cost: £1.50 to send a postcard. Terms and conditions apply. See www.o2.co.uk

** Cost: standard rate for each message sent. From 18p for each message received. Terms and conditions apply.




Chat

Our anonymous Chat service is the place to meet friends around the country or have a little flirt on our special speed dating service.



Downloads

Bring your mobile to life with downloads. Get your favourite tune as a polyphonic ring tone. Download wallpapers from motors and bizarre to music, animals and male or female model of the day.

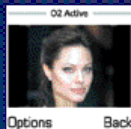

★ Entertainment

Whether you want to dance into the small hours or catch the latest Hollywood blockbuster, O₂ Active will point you in the right direction. Wherever you are, it's all you need for a crazy night out or a cosy night in.


Films and Gigs – Check out what's on near you – movies, gigs, comedy nights – and more.

Time Out Eating Guide, Clubs and Bars –

Whether you're a curry fiend or pasta freak, into busy bars or quaint boozers, these reviews will help you find the best restaurants, clubs and bars to match your taste.

TV Guide – Fancy a night in? Put your feet up and find out what's on the box.

Gossip – You'll hear it here first. Get the hot news from the movie and music worlds – and find out who's up to what and with who. And if you can't get enough scandal on the stars, simply sign-up for daily alerts* about every little detail.

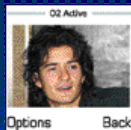

Time Out Stars – Want to know how your career, finances and love life are written in the stars? Here's where you find out.

Bollywood – The top 10 chart, interviews, intrigue and glamour with the best of Bollywood direct to your mobile.

Cartoons – Have a laugh with the latest Garfield or Dilbert cartoon – then share the joke with your mates by sending it on.


* Standard cost to send text to 80202. From 13p to receive texts except 'Footy Alerts' – 18p to receive.

O2 does not suggest in any way that the celebrities featured in this guide are endorsing O2 products or services.



Sport

If you can't be at the match, the match can come to you. With O₂ Active, you can stay on top of the latest sports action, wherever you are.*

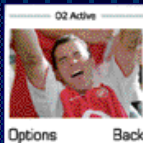


Access special 'live' sections to keep up-to-date with the latest events and results. Get all the action from the Premiership and Champions League football. Keep up-to-date with this year's Olympics and Extreme Games, all the F1 races and the major tennis, golf and cricket tournaments. In fact, you can read all the day's sports news with full-colour pictures. Find out about the best sport on TV with the sports guide or be one of the first to get the red-hot sports stories by signing up for Text and full-colour Picture Sports Alerts. Plus download Football legends wallpapers.

* Subject to network coverage.

News


Even when you're engrossed in O₂ Active, you can stay in-touch with what's going on around you.

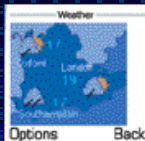

Get the breaking stories direct from the BBC, covering national and international affairs or business, technology, entertainment, and more – in text and with full-colour pictures.

Music

If you're into music, then get into O₂ Active. You can download your favourite tune as a polyphonic ring tone then dress up your mobile with pictures of your favourite music artists.

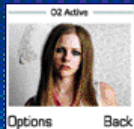

O₂ does not suggest in any way that the celebrities featured in this guide are endorsing O₂ products or services.

O₂ Active has all the stories and pictures behind the songs so you can find out which music stars are making headlines with music news and gossip.

You can also get the latest weekly single and album charts and sign up for weekly text chart alerts. If there is a track you've heard but don't know the name, you can tag it with your mobile. Just click on Shazam* under O₂ Active Music, aim your mobile at any loud music and Shazam* will text you back the name of the track.

Plus keep your finger on the pulse and use your O₂ Active mobile to find out what live gigs and music events are happening near you.

* Cost: 50p per tag. Terms and conditions apply. See www.o2.co.uk



Info Services

Text Alerts* – Whatever's important to you, whether it's footy scores, the latest showbiz gossip or the top news story, you can keep bang up-to-date with O₂ Text Alerts. You can subscribe and unsubscribe to alerts in a few easy clicks on your handset within the text alerts menu.

Train Times – Tired of delayed trains or cancellations. Check train times on the move and get updates wherever you are.

Time Out City Guides – Access information on the top ten European cities to visit, including the best places to stay, eat, drink and party.

lastminute.com – Make last minute holiday plans, gift purchases, dinner reservations and more using your mobile with lastminute.com and O₂ Active. In addition to the O₂ Active service, shortcode 5959 can be used to access lastminute.com


Thomson Local Directory – Cabs, fast food, restaurants and shops, find the phone numbers you need fast, while you are on the move.

National Lottery – Look up your winning numbers wherever you are with National Lottery results.



* Cost: standard rate for each message sent. From 13p for each message received. Subject to network coverage. Terms and conditions apply.

Maps and routes – Find your way around by car, bike or foot without ever having to carry a map, ask a stranger or phone a friend with full colour route and walking maps. All you have to do is enter where you are and where you are going and the maps will show you the way.

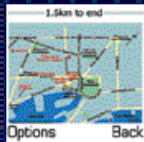

My WAP – Impress your friends with your own WAP site. It's so easy to set up and all from your mobile. Want to organise a night out? Update your WAP site with all the info and get your friends to access your homepage to find out where they are going and what you have organised for them.

How to access O₂ Active

Your O₂ X1i is already set up to access O₂ Active.*

- From the standby screen, press and hold  to access O₂ Active

The O₂ X1i will then access O₂ Active and the O₂ Active icons homepage will load on your screen.

- Alternatively, to access O₂ Active select  from the main menu. You will then be taken to the WAP service screen
- Select **O2 Home** by pressing  and the O₂ X1i will then access O₂ Active, and the O₂ Active homepage menu will load onto your screen

How to close O₂ Active

- Whilst on O₂ Active, press and hold 

* Terms and conditions apply to O2 Active. GPRS charges may apply. Please visit www.o2.co.uk for details. O2 Active is a trademark of O2 Limited. Services are handset and network dependent.






Games

There are two games to play on your O₂ X1i.

- In the main menu, scroll to **Games** and select by pressing 
- Scroll through the games available and press  to select



Please note:

Your O₂ X1i does not support downloadable Java games.

Monkey Mayhem

Monkey Mayhem is a platform game. You have to collect fruit in each level and avoid the monkeys who are out to get you. The game is divided into five levels. You have three lives during the game period. A life will be lost whenever you collide with a monkey. Dig a hole to avoid a monkey. When no lives are left or the time is up, the game will be over. You should collect all the fruit or get a key to pass the current level in the specified time. Once you have collected all of the fruit a key appears. Collect the key open the door and escape to the next level. Good Luck!

- Scroll to **Monkey Mayhem** and press  to select and start playing the game
- Press  and  to scroll to **Help** or **Exit**

Keys

-  – to go up
-  – to go down
-  – to go right
-  – to go left
-  – to dig a hole
-  – to enter the game
-  – to exit the game

Eda Mouse

Eda Mouse is an easy intellectual game with 8 levels. You have to make Eda collect 3 fruits which belong to same type e.g. apples, then launch them to eliminate the falling fruits from above before they all come down on Eda.

- Scroll to **Eda Mouse** and press  to select and start playing the game
- Press  and  to scroll to **Help**, **Sound**, **Top Score** or **Exit**

Keys

-  – to go right
-  – to go left
-  – to launch fruit
-  – to enter the game
-  – to exit the game



Media Center

The media center stores all the images, photos, ring tones and wallpapers you have either taken, downloaded or received.

- In the main menu, scroll to **Media Center** and select by pressing 



Then select;

Images

The image library contains all the images and photos you have saved.

- Scroll to **Images** and press  to select

When you enter this menu the most recently saved images will be displayed as thumbnails (small miniature versions of the photos you have taken), and the top of the screen will display the file name of the currently highlighted thumbnail. The size and date of the image will also be displayed on the right of the thumbnail.

- Press  and scroll through the images previewed and press  to view fully

Managing your images

To manage your images select **Option** by pressing , and choose from the following options:

Send

Enables you to send your image to someone else in a media message. You can also send a media message by entering **Messaging – Multimedia**. For further information on Media Messaging please refer to page 73.

Rename

Select to give your image a new file name.

Save to contacts

You can assign the image to one of your contacts. When the contact calls you the assigned image will appear on your display. For further information on saving an image to one of your contacts please refer to page 40.

Set as wallpaper

Designates this image as the wallpaper for the display's standby screen. You can also do this by going to **Settings – Display – Wallpaper**. For further information on Wallpaper please refer to page 118.

Delete

Select to delete the image stored.

Delete all

Select to delete all the images saved in **Media Center – Images**.

Ring tones

Change the ring tone on your mobile and even assign a ring tone to one of your contacts so you'll know who is calling just by the ring tone.

- Scroll to **Ringtones** and press  to select
- Scroll through the ring tones available



Managing your ring tones

- Highlight one of the ring tones available and press  to select **Option**, and choose from one of the following options;

Default tone

Select your preferred ring tone and set it as your mobile's default ring tone.

Save to contacts

You can assign the ring tone to one of your contacts, just like images and wallpaper. When your contact calls you the assigned ring tone will sound. Please refer to page 40 for more information.

Details

Select to view the name and size of the ring tone file. It will also detail whether the ring tone is pre-defined – supplied already on your mobile.

Wallpaper

Change the wallpaper on your mobile's display. Choose from the list of preset wallpapers or one you have downloaded or received in a media message.

- Scroll to **Wallpaper** and press  to select
- Scroll through the list of wallpapers and press  to view

Managing your wallpapers

- Press  to select **Option**, then select;

Set to wallpaper

Scroll through the wallpapers available and select one. This will then show on your standby screen.

Delete all

Select to delete all the images, ring tones and wallpapers you have saved.

Memory

Select to view the remaining space available on your mobile.





Tools

- In the main menu scroll to **Tools** and select by pressing 



My Services


- Select **My Services** if you are on Pay & Go to access a list of useful numbers and services

Please note:

My Services is only available to Pay & Go customers. If you are on a Pay Monthly calling plan your first menu option within **Tools** is **Alarm** (please see page 122).


Alarm

- Scroll to **Alarm** and press 
- Select the alarm you wish to set and activate and press  to select




Please note:

- You can also rename the alarm. Scroll to the alarm you wish to rename and press  to select **Rename** and follow the prompts
- If you activate the alarm feature, when the specified date and time arrive, your mobile will sound the alarm, even if it is switched off



- To turn the alarm on, press , scroll to **On** and press  to save



Then, use the following steps to complete the alarm settings:

Time



- Enter the time when an alarm will go off

Frequency

-  – Set how often the alarm sounds
 - Press  to enter **Frequency**
 - Use  to set the alarm mode:
 - Once** – alarm will go off only once
 - Daily** – alarm will go off every day at the specified time
 - Weekday** – alarm will go off Monday through Friday. It will not go off on weekends

Time duration

-  – To set the length of time the alarm will sound
 - Press  to enter **Time Duration**
 - Scroll through the options available and press  to select

Alarm tone

-  – To set the ring tone for the alarm
 - Press  to set the alarm tone
 - Scroll through the options available and press  to select

- Once complete press  to save the Alarm settings. To confirm that the alarm is set  will appear in the standby screen

Please note:

When the alarm rings, there are two ways to turn it off:

- Press  or . Your alarm will not sound until the next scheduled time
- Press  and select **Snooze**. The alarm will ring again minutes later

World clock

If, during travel, you move between time zones, your mobile will automatically adjust the time displayed on the screen so that you always have access to accurate local time.

Please note:

If you have not set the current time and date on your mobile, go to the menu **Settings – Date & Time** and set.

- Scroll to **World Clock** and select by pressing 

On – the time displayed on your mobile will be reset automatically according to the local network operator's time zone prompts

Off – your mobile will display the time you set even if you travel into other time zones. Your mobile will ignore time zone prompts issued by the local network operator

Confirm First – your mobile will ask for your confirmation before it resets the time

Calendar

You can use the calendar to set up forthcoming events such as a meeting, an appointment, or a friend's birthday. The calendar will also remind you about events you have previously scheduled.

- Scroll to **Calendar** and press 
- When you open the calendar, the current date will be highlighted

Please note:

If you have not set the current time and date on your mobile, go to the menu **Settings – Date & Time** and set.

To set a memo

- In the calendar screen, press  to move the red box to the date where you wish to create a memo
- When the desired date is highlighted, press , then select **Option** by pressing  to enter the calendar menu. Scroll to **Add** and press  to select and open the memo editor
- In the memo editor screen, scroll to the data field you wish to edit



You can enter data in the following fields:

Subject

-  Enter a name for the event associated with the memo. Press  to enter **Subject** and then enter the name

Start date

-  Change the memo's assigned date by pressing the appropriate number keys

Start time

- Enter a time for the event associated with the memo by using the appropriate number keys

End date

- Enter the date when the event is due to finish

End time

- Enter a time for when the event is due to finish

Reminder

- You can set a reminder so that the alarm will sound from five minutes up to one day or not at all, after the scheduled time originally set for the event
 - Press  and  to scroll through the options available

Repeat

- Choose whether the memo will regularly remind you about the event after the scheduled date. Choose between **None**, **Daily**, **Weekly**, **Monthly** or **Yearly**
 - Press  and  to scroll through the options available

Location



- Enter a location for the event
- Press , then enter the location and press to save

Attendees



- Enter the names of all who are due to attend the event
- Press , then enter the attendees and press to save

Memo



- Record any notes about the event associated with the memo
 - Press , then enter any memos associated with the event and press to save
- After entering the data in each of the fields, press to select **Save** and save the memo to that date

You can then perform the following tasks:

- Press  to select **Option** and select whether to **Edit** or **Delete** the highlighted memo or **Add** a new memo. You can also select **Send vCalendar** to send the event details to someone else in a text message
- Press  to view the details of the highlighted memo. Then press  to select **Option** and choose whether to **Edit** or **Delete** the memo, or **Send vCalendar**
- Press  to select **Back**, to return to the **Calendar** menu then press  to select **Option** and choose from the following options:

Add – to add a new memo

Go to today – to go direct to today's date

Delete after – select whether to delete the memo after **1 week**, **2 weeks** or **1 month**. Alternatively, select **None** to keep the memo detailed in your calendar

Delete all – select to delete all existing memos


- Press  twice to select **Back** and return to the **Calendar** screen. The dates that already contain memos will now be marked by a yellow box

Calculator

Allows you to use your mobile as a calculator.

- Select **Calculator** by pressing  to open the calculator screen
- Use the keypad to type in the numbers you wish to calculate
- Use  to perform the mathematical operations on the screen
- Press * to enter a decimal point
- Once completed press  to select =

Entered numbers
and calculation
results appear in
this field



Please note:

- You can enter numbers up to a maximum of 8 digits in length
- If you make a mistake press  to delete

Currency converter

- Scroll to **Currency Converter** and press  to select and enter the currency converter screen

Once you enter the currency converter screen, the default currencies will be displayed.

Step one

- To set the currencies for conversion, select **Option** and select either **Currency 1** (to set the currency at the top of the screen) or **Currency 2** (to set the currency at the bottom of the screen), then press  to confirm
- After selecting a currency from the list, press 

Step two

- To set the exchange rate, select **Option** and then **Rate Setting**
- Enter the rate from converting between currency 1 and currency 2 and press  to save
- The conversion calculation result will be displayed at the bottom of the screen

Please note:

- The calculation can provide precision up to two decimal places
- The exchange rate field can accommodate a maximum of six digits (including decimal digits)
- Press * to enter a decimal point

Step three


- Return to the currency converter screen and select one of the currencies
- Enter an amount that you wish to convert into the other currency. The amounts can be up to six digits long

Step four

- Press . The converted amount will appear in the field for the other currency

Stop watch

- Scroll to **Stop Watch** and press 
- Press  to start the stopwatch
- While the stopwatch is running, you can press  to select **Split** and save up to 20 elapsed times (such as in a race). The display will show the saved times in the lower part of the screen
- Press  to halt the stopwatch
- Once the stopwatch has stopped, select **Reset** by pressing  to zero the stopwatch



Please note:

Pressing  to select **Back** while the stopwatch is running will bring up the **Quit?** warning message although the stopwatch will continue to run. Selecting **Yes** will stop the stopwatch and **No** will return to the timer screen.

ignore this page

ignore this page



Settings

The settings menu is used to set basic parameters for your mobile such as time and date, profiles, security, network and call settings.

- In the main menu scroll to **Settings** and press 

Date and time

You can set the time and date, as well as the format in which the time and date will be displayed on the start up screen.

- Select **Date & Time** by pressing 



Date

Scroll to **Date** and enter the current date which will be displayed on the standby screen and calendar.

Time

Scroll to **Time** and enter the current time you wish to display on the standby screen.

Format

Scroll to **Format** and decide the format in which the time and date will appear on the standby screen.

- To amend the format press  and 
- Once completed press  to save

Profiles

Change the settings that determine how your mobile alerts you to an incoming call, in a few simple clicks.

- Scroll to **Profiles** and press 
- Press  and scroll to the profile that best suits the environment you are in
- Then press  to activate

Choose from the following:



Normal

This is the default profile. Once activated the display's status bar will show the 🔔 icon.

Meeting

The options in this profile have been preset to suit a meeting environment e.g. no audible ring tone or keypad tones. Once activated the display's status bar will show 🗣️.

Silent

The options in this profile have been preset to suit environments where you need to be discreet with your mobile e.g. no audible ring tone or keypad tones. Once activated the display's status bar will show 🚫.

Outdoors

The options in this profile have been preset to suit an outdoor activity e.g. the highest volume ring tone or activation of both ring tone and vibrating alerts. Once activated the display's status bar will show 🌞.

Headset

This profile is only active when the headset is attached to your mobile. Once activated the display's status bar will show .

Personal

You can use this profile as a group of custom settings, and rename the profile if desired. Once activated the display's status bar will show .

You can also rename this profile so that the name you choose will appear on the standby screen. Please refer to [Rename](#) on page 141.

You can adjust the settings for each of the profiles to suit a particular environment.

- Scroll to the desired profile and press  to select **Edit**

Then select one of the available options;

Vibrate

Scroll through the options available listed below and press  to select

- Ring only
- Vibrate only
- Ring and vibrate
- Vibrate then ring

Ring tone

Choose from a selection of ring tones. Scroll to your preferred ring tone and press  to select.

Please note:

You can also download your favourite tunes and save them as your ring tone from O₂ Active. Please refer to page 98 for more information.

Message tone

Select how your mobile alerts you when you receive a message.

- Scroll through the options available and press  to select

Calendar tone

Choose a ring tone for the alarms set for events or reminders in your calendar.

- Scroll through the options available and press  to select


Keypad tone

Determines whether keypad tones are played when keys are pressed.

- Scroll to **On** or **Off** and press  to select

Ring volume

Press  to adjust the ring tone volume or mute the ring tone. Press  to confirm.



Answer mode

Use  to scroll between the options available and press  to select. Choose between:

- **Send key** – allows incoming calls to be answered only by pressing 
- **Any key** – allows incoming calls to be answered by pressing any key except , which is used to reject incoming calls

Rename

Allows you to provide a new name for the profile (only available for the personal profile).

Factory reset

To return all settings to the original factory settings.

Please note:

The restore setting requires a password. The default for this is **1234**.

Display

Adjust your mobile's display settings including the welcome animation, wallpaper and more...

- Scroll to **Display** and press 
- Then select the following options:

Wallpaper

Your mobile says a lot about you so ensure you choose the wallpaper for your display carefully. You can choose from the list available or even select an image that you have taken with your mobile's built-in camera, downloaded from O₂ Active or received from friends in a media message.

- Scroll to **Wallpaper** and press  to select
- Select either **Wallpaper** or **Photo** to choose between one of the preset wallpapers or an image that you have saved

Wallpaper

- Scroll through the preset wallpapers available and press  to view

- To save the wallpaper currently in view press  to save or press  to select **Back** and choose another wallpaper

Photo

- Scroll through the photos that you have taken or received and press  to view
- To save the photo as your wallpaper press  to save or press  to select **Back** and choose another photo

Welcome message

Choose the photo, wallpaper or message that will be displayed when your mobile is turned on.

- Scroll to **Welcome Message** and press  to select

Then choose from one of the following options:



Wallpaper

- Scroll to **Wallpaper** and press  to select **Edit**. Scroll through the preset wallpapers available
- Press  to view and then press  to save
- Then scroll through the ring tones available that will accompany your wallpaper greeting when you turn your mobile on. Press  to select and save

Photo

Select one of the photos you have taken or received as your welcome greeting as well as a ring tone accompaniment.

- Scroll to **Photo** and press  to select **Edit**
- Scroll through the photos available and press  to view and then press  to save
- Then scroll through the ring tones available that will accompany your photo when you turn your mobile on. Press  to select and save

Text

- Scroll to **Text** and press  to select **Edit**
- In the Text screen, enter your welcome message and press  to save
- Then choose the ring tone to accompany your message and press  to save


Off

Select to cancel all welcome messages.

Banner


Enter the message that will be displayed permanently on your screen. You can insert your name so that you can identify your mobile easily.

- Scroll to **Banner** and press  to select
- Insert your message and press  to save
- Then return to the standby screen and view your banner message on the display




Contrast

- Scroll to **Contrast** and press  to select
- Adjust the contrast of the screen's display using  and press  to confirm



Brightness

- Scroll to **Brightness** and select by pressing 
- Adjust the brightness by pressing 
- Press  to confirm



Audio

This menu allows you to set various sounds that your mobile uses, such as ring tones, message tones, alarm tones and calendar tones as well as altering the speech volume and ring volume.

- Scroll to **Audio** and press . Then select from the options available:



Ring tone

Message tone


Alarm tone

Calendar tone

Keypad tone

Ring volume

Speech volume – Press  to adjust the speech volume and press  to confirm




Please note:

Some of the options provided in this menu and the Profiles menu are identical. Please refer to **Profiles** on page 136.

Call settings

- Scroll to **Call Settings** and press 
- Then select from one of the following options:



Answer mode

Choose how to answer an incoming call from the list below and press  to confirm.

Send key – allows incoming calls to be answered only by pressing 

Any key – allows incoming calls to be answered by pressing any key except , which is used to reject incoming calls

Connect alert

Activating this feature enables your mobile to provide a ring tone or vibrating alert, or flash the backlighting when the recipient of a call has answered.

- Scroll to highlight either **Ring Tone**, **Vibrate**, **Flash** or **Off** and press  to confirm your selection

Minute minder

Once this option is activated, your mobile will emit a beep once every minute during a call.

- Select **On** or **Off** and press  to confirm

Show number

You can decide whether or not to display your phone number on the recipient's phone when you make a call.

- Scroll through the options listed below and press  to select

On – the recipient's phone will display your phone number

Off – your phone number will be shown on the recipient's phone

Preset – whether your phone number will be displayed on a recipient's phone will be determined by the default set by O₂

Please note:

If this feature is turned off, you may not be able to make phone calls in certain countries, such as Singapore and China.

Call divert*

Forward incoming calls to another designated phone number or your Voicemail.

Forward all – forwards all incoming calls. After the **Forward all** mode is activated  will be displayed on the standby screen

When busy – forwards calls when you are on another call

No reply – forwards calls when you do not answer

Not reachable – diverts calls when your mobile is turned off or outside network coverage

Cancel all – to cancel all call forward settings

Call barring*

You can lock your mobile to reject incoming calls or bar outgoing calls, domestic or international. Call barring is a password protected network service, and details should be acquired from O₂ Customer Service.

All outgoing – blocks dialling of any calls from your mobile

Intl. out – if activated no international calls can be made from your mobile

* Pay &Go customers can only divert to Voicemail 901.

Intl. except home – if activated, your mobile can only be used to dial local calls and calls to your home country from abroad. Other international calls will be barred

All incoming – rejects all incoming calls

Incoming when roaming – if you are in another country (using roaming), activating this option will cause your mobile to reject all incoming calls

Cancel all – cancels all call barring settings. You must enter your password in order to cancel these settings

Change password – To change your password

Call waiting*

If there is an incoming call when you are in the middle of another call, the screen will display the number of the incoming call and call waiting message to alert you.

- Scroll to **On** or **Off** and press  to confirm your selection

Auto redial

If there is no answer at a number you have dialled, your mobile will automatically redial.

- Scroll to **On** or **Off** and press  to confirm your selection

* Available to Pay Monthly customers only.

Fixed dialling number*

After this feature is activated, your mobile will only be able to dial numbers on the fixed dial number list. If a number is not on the list, calls cannot be made to this number.

Before activating the fixed dial number feature:

- Select **View**, then **Option** and select **Add** to create a fixed dial number list
- Enter the PIN2 code, and then add a new number to your fixed dial number list

After creating the list, you can view, edit and delete numbers in the list.

Please note:

If the PIN2 code is entered incorrectly three consecutive times, the PIN2 code will be locked down. You will need the PUK2 code to unlock the PIN2 code. Contact Customer Service to obtain the PUK2 code.

* Available to Pay Monthly customers only.

Active line*

You can use two different phone numbers on one mobile, designating one number for dialling calls, while accepting incoming calls dialled to both numbers.

Network**

Network mode

You can choose whether the network selection mode that your mobile uses when turned on is automatic or manual.

- Scroll to your preferred choice and press  to select

Automatic – when outside the coverage of your regular network, your mobile will automatically search for usable networks

Manual – when outside the coverage of your regular network, your mobile will list available networks and allow you to choose

Available list

This will show a list of countries available for you to select.

- Scroll through the options available and press  to select

* Available to Pay Monthly customers only.

** Only available whilst abroad with your O2 X1i mobile.

Band setting

According to your requirements, you can set an appropriate band in the GSM network system.

- Scroll through the band settings available and press  to select

Connection


Set your mobile to search for a GPRS / GSM network when it is turned on.

GPRS & GSM – when it is turned on, your mobile will search for available GPRS and GSM networks

GSM only – when it is turned on, your mobile will search only for a GSM network

Security

Prevent unauthorised use of your mobile by using a PIN code, phone password and SIM card lock.



Please note:

To protect your mobile, the **Security** menu requires you to enter a handset code before you can access the menu and set the options. The default handset code is **1234**. To change the handset code, please refer to the **Phone Lock** option.

PIN code

A PIN code will prevent unauthorised use of the SIM card. Unless the correct PIN code is entered when your mobile is turned on, the SIM card cannot be used, even if it is inserted in another mobile.



PIN code

Select PIN code to activate/deactivate or change the PIN1 code.

- Select **PIN Code** and press  to select, then enter your PIN code and press . The default PIN code is **5555**
- To activate/deactivate the PIN1 code, scroll to **Set Status** and press  to select. Then scroll to **On** or **Off** and press  again to select
- To change your password, scroll to **Change Password** and press  to select. Then enter the new code and then confirm the code when requested

PIN2 code*

Used to change the PIN2 code. The procedure is the same as for the PIN1 code.

Please note:

If the PIN code is entered incorrectly three times your mobile will automatically disable. The screen will display the messages PIN blocked or Enter PUK (Personal Unblocking Key). Do not try to enter your PIN again. Contact Customer Service for a PUK code to unblock your mobile.

* Available to Pay Monthly customers only.

Phone lock

Select to activate/deactivate or change your mobile's startup password which prevents unauthorised use of your mobile.

Once activated, your mobile will be locked down when it is turned on unless this password is correctly entered. If an incorrect password is entered, your mobile will remain locked down, and cannot be unlocked even if the SIM card is replaced by another one. When the mobile is locked, you will only be able to make emergency calls.

The procedure for setting the phone lock password is the same as for the PIN1 code and the default password is **1234**.

SIM lock

Used to prevent unauthorised use of your mobile with other SIM cards. After you activate the SIM lock, only the SIM card present when the feature was activated will be accepted by the mobile.

Before setting the SIM lock feature, you must enter the previously set SIM lock password – the default password is **1234**. Your new password must be between 4 and 8 digits in length.

Please note:

Your mobile can recognise up to three different SIM cards. The first time you enter a new SIM card your mobile will request the SIM lock password. If entered correctly, the mobile will be able to recognise the new SIM card and use it normally. The next time your mobile is turned on with this SIM card inserted, you will not be asked to enter the SIM lock password again.

Screen lock

Once activated, if you don't perform any tasks for a set period of time, your mobile will automatically activate the screensaver, the purpose being to prevent personal information on your mobile from being viewed by others.

To return to the original screen, after pressing any key, you must enter the password you set for this feature.

- Scroll to **Screen Lock** and press  to select
- Enter the default screen lock password which has been preset to **1234** and press 

Set status

- To set the screen lock feature, scroll to **Set Status** and select
- To turn the screen lock off, scroll to **Off** and press  to select
- To turn the screen lock on, scroll to **On**. Before pressing  to save, press  to select **Edit** and select the length of time your mobile will be active before it locks and press . Then press  again to select **On**

Change password

- You can leave the password as **1234**, however if you wish to amend, scroll to **Change Password** and press  to select
- Then enter the new password in the **New Password** and **Confirmed** fields, followed by  to save the new settings

Auto keypad lock

You can set you mobile's keypad to lock after a certain period of time. To unlock the keypad you will need to enter the password. To set the auto keypad lock follow the prompts that are similar to the screen lock feature.

Factory reset

Restores all of your mobile's settings to their factory defaults.



Chapter 5

Miscellaneous

- Abbreviations and Acronyms
- Questions and answers
- Technical data

Abbreviations and Acronyms

What is roaming?

Roaming allows you to move from one base station (cell) to another or from one network to another without affecting the call.

What is tri-band?

A tri-band mobile has the capability to automatically switch between frequencies. It can therefore operate on three frequency bands, e.g. 900 Mhz, 1800 Mhz and 1900 Mhz. The O₂ X1i is a tri-band mobile.

What is a SIM card?

Subscriber Identity Module or SIM is the little gold-plated plastic card that you get from O₂ and which holds the unique data the network needs to identify your mobile.

What is PIN* and what is PUK?

Access to use a mobile is most often protected by a code known as 'PIN' – Personal Identification Number. Your SIM card comes with a default PIN that you can change to any code you prefer. See page 155 for details. If you forget your code, or by mistake enter a faulty code three times in a row, the SIM card will lock. To unlock, you must enter the

* Pay &Go mobiles are not set up with a default PIN code.

Personal Unblocking Key or 'PUK' code which you can get from O₂ Customer Service or by visiting **www.o2.co.uk/PUK** and then follow the instructions.

What is PIN2?

PIN2 is a security code that you can obtain by calling O₂ Customer Service.

What is IMEI?

IMEI stands for International Mobile Equipment Identifier and is an identification system that can recognise every mobile by a specific number. If a mobile is stolen, the IMEI system is capable of blocking it on all network operators that support the system.

What is WAP?

Wireless Application Protocol or WAP is a standard developed for mobile phones. It was designed to give quicker access to mobile content than existing web protocols. Using WAP will open services to you such as O₂ Active which offers a wide variety of mobile services and entertainment.

What is GPRS?

General Packet Radio System is a service protocol built on GSM technology. Charges may therefore be based on the amount of transferred data rather than on airtime.

What is CSD?

A wireless service protocol used for WAP. CSD stands for Circuit Switched Data and will enable continuous connection and payment by the amount of time spent on connection.

What is a URL?

Uniform Resource Locator or URL is an address system used on the Internet. All WAP homepages have a unique address, allowing browsers to distinguish one from the other. A WAP URL always starts with the text string: `http://wap` followed by the address.

What is APN?

APN stands for Access Point Name and is basically a URL address on the Mobile Internet.

What is ISP?

ISP stands for Internet Service Provider.

Questions and answers

Q: Why does my mobile not turn on when I press the  key?

A: The key press has been too short or the mobile has shut down because the battery power level is too low to make calls. Recharge the battery fully.

Q: The standby time seems too short. Why is this?

A: You have made excessive use of the mobile functions or the display light has been on continuously due to unintentional key activation.

Q: My mobile displays 'Insert SIM', what does this mean?

A: You must insert the SIM before you can use the mobile. If it is already installed, remove and clean the blank area with a dry cloth, then reinsert.

Q: My mobile displays 'INVALID SIM', what does this mean?

A: The mobile is SIM-locked and will not accept the inserted SIM. Insert the correct SIM or contact O₂ Customer Service.

Q: My mobile displays 'EMERGENCY CALLS ONLY', what does this mean?

A: Your SIM card is not properly installed or configured, or you are out of network range.

Q: My mobile displays 'NO NETWORK', what does this mean?

A: You are outside network range or there is no clear path to the transmitter. If you are inside a building, try moving towards a window.

Q: Some calls are not processed. What is wrong?

A: A call bar has been set to restrict mobile usage. Check call barring and cancel as necessary.

Q: Someone else is receiving my calls. What is wrong?

A: The mobile has been set to forward your calls to another number. Cancel call forwarding as necessary.

Q: What is ITAP?

A: ITAP text input is a predictive text editor that allows you to type using just one click per letter and saves you time when writing SMS and text entries.

Q: What type of networks are supported?

A: Check the technical specifications on page 171.

Q: Can I use my mobile inside a car?

A: Please refer to 'Driving Safety' on page 179.

Q: How do I clean my mobile if it becomes soiled?


A: See 'Mobile care' on page 175.

Q: My mobile has been lost or stolen. What do I do?

A: Contact O₂ Customer Service immediately to bar your mobile and prevent misuse. If your mobile has been stolen you should report the incident to the local police.

Q: How do I reset my mobile to factory defaults.

A: Enter the Settings menu and scroll to 'Factory reset' and when prompted enter the code.

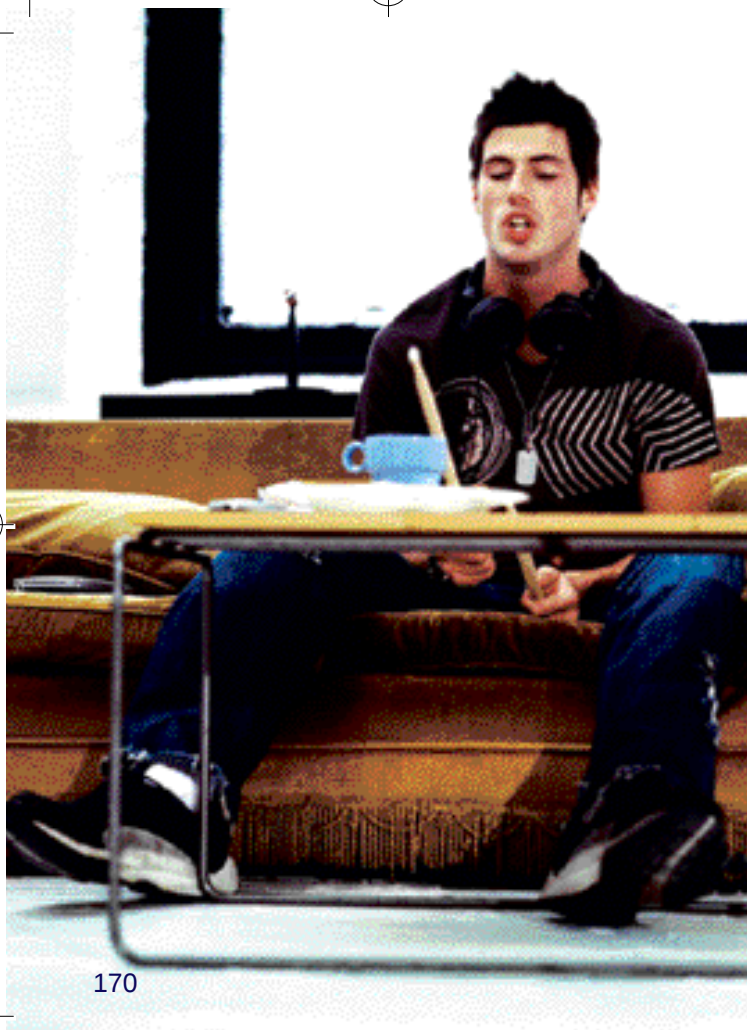

Technical data

Size: 102 x 44 x 18mm

Weight: 86g

Talktime: Up to 5 hours

Standby time: Up to 237 hours

Display: 65k colour screen
(128 x 128 pixels)

Camera: CIF camera

Band: Tri-band

GPRS: Class 10

Accessories

Contact O₂ Retail for more accessories.

Personalised features

Personalised profiles

Greeting

Wallpaper

Polyphonic ring tones

Leisure

Access the colour world of O₂ Active.

Organising features

Calendar

Alarm

Calculator

World Clock

Currency converter

Stopwatch



Chapter 6

Safety

- Safety information for mobiles
- Mobile care
- Driving safety
- Electronic devices
- Other safety guidelines
- Cautions
- R&TTE Directive 1999/05/EC

Safety information for mobiles

Read this information

Your O₂ X1i™ mobile phone has been designed, manufactured and tested so as not to exceed the limits for exposure to electromagnetic fields recommended by the Council of the European Union. These limits are part of comprehensive guidelines developed by independent scientific organisations.

European standards provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a mobile phone to be measured by reference to the Specific Absorption Rate (SAR). The SAR limit for the general public is currently 2 watts per kilogram averaged over 10 grams of body tissue.

Your O₂ X1i mobile phone SAR value is 1.09 watts per kilogram.

Mobile care

You should never attempt to open the mobile casing. There are no user-serviceable parts inside, and you might damage sensitive electronic circuits and components. Unauthorised disassembly will void the warranty.

You should never leave your mobile in the window of your car or otherwise expose it to strong sunlight or excessive heat for a prolonged period of time as this may damage it.

You should never handle your mobile with wet hands or expose it to moisture or liquids of any kind. Continuous changes from a cold to a warm environment may lead to condensation inside the mobile, resulting in corrosion and possible damage.

If you pack your mobile in your suitcase during travel, beware not to damage it. Cramming a suitcase may crack the LCD display. Remember to switch off your mobile during air travel.

As with all other radio devices, touching the built-in antenna area during telephone conversation may impair the quality and lead to shorter standby time due to increased power consumption.

The battery

Your mobile is equipped with a high-performance Li-Ion battery. Optional battery types may be available, check with your local retailer. Observe the maintenance guidelines and your battery should give you a long service life.

- At the beginning of the battery's life, fully charge and discharge (let it go flat) three times
- Do not over charge the Li-Ion battery, as this can result in a reduction in battery performance and life span. The recommended maximum charge time is 6-8 hours
- Avoid repeated short charging. It is preferable to let the battery go flat and then recharge it completely
- Avoid charging in strong heat or extreme cold. Ambient room temperature is preferable. The battery has its optimum performance in an ambient temperature of +5 °C to +50 °C
- Don't store a battery near a fire or heat source

- Use only the battery approved by the manufacturer
- Never replace the battery with a non-approved battery
- Never try to open the battery as it contains substances that might be harmful if swallowed or allowed to come into contact with unprotected skin
- Never short-circuit the battery, as it may overheat and cause a fire. Keep away from jewellery and other metal objects
- Never dispose of the battery in a fire. It could explode and release harmful substances into the environment
- Never dispose of the battery with your regular household waste. Take it to a hazardous material collection point
- Do not touch the battery terminals
- **Caution: Risk of explosion if battery is replaced by an incorrect type**

The charger

- Use only the charger supplied with your mobile.
- Never pull the charger cord to release it from the mains
 - pull the charger itself

Cleaning and storing

- Your mobile should always be handled with care and protected from dirt, dust and damp. To avoid scratches, never place your mobile face down
- If cleaning is necessary, switch the mobile off and wipe carefully with a soft, slightly damp (not wet) cloth. Allow the mobile to dry completely before switching it on. Never use solvents for cleaning
- If you are not going use your mobile for some time, fully charge the battery and store the mobile in a dry place away from direct sunlight. Your mobile should be switched off during storage
- Never expose your mobile to heat or strong sunlight
- Never expose your mobile to moisture or liquids of any kind
- Do not paint your mobile or otherwise block the keypad, microphone or earpiece function, i.e. with stickers

Driving safety

O₂ fully supports the new legislation announced by the Department for Transport, banning the use of handheld mobile phones whilst driving. It is an offence whilst driving to hold a mobile or cradle it in your neck, at any point during the setup, making or taking of a phone call, text message or any other data related mobile communication. Use of fully installed car kits are still permitted, as are the use of alternate hands-free accessories.

In the interest of safety, we would recommend use of a cradle whilst using any form of hands-free accessory. When driving we recommend that you use voicemail wherever possible, and that you listen to your messages when you are not in the car. If you must make a hands-free call when driving keep it brief.

An airbag inflates with great force. **Do not** place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your mobile.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six (6") inches be maintained between a mobile and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- **Always** keep your mobile more than six inches from your pacemaker when it is turned on
- Do not carry your mobile in a breast pocket
- Use the ear opposite the pacemaker to minimise the potential for interference
- If you have any reason to suspect that interference is taking place, turn your mobile **off** immediately

Hearing aids

Some digital mobiles may interfere with some hearing aids. In the event of such interference, call Customer Service to discuss alternatives.

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your mobile **off** in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your mobile **off** where posted notices so require.

Other safety guidelines

Aircraft

Regulations prohibit using your mobile while in the air. Switch **off** your mobile before boarding an aircraft.

Blasting areas

To avoid interfering with blasting operations, turn your mobile **off** when in a 'blasting area' or in areas posted: 'Turn off two-way radio.' Obey all signs and instructions.

Potentially explosive atmospheres

Turn your mobile **off** when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas such as petrol stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

Cautions

Your mobile is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

- **Do not** use this equipment in an extreme environment where high temperature or high humidity exists
- **Do not** abuse the equipment. Avoid striking, shaking or giving it a shock. When not using the unit, lay it down to avoid possible damage due to instability
- **Do not** expose this equipment to rain or spilled beverages
- **Do not** use unauthorised accessories
- **Do not** disassemble the mobile or its accessories. If service or repair is required, return the unit to an authorised service centre. If the unit is disassembled, the risk of electric shock or fire may result
- **Do not** short-circuit the battery terminals with metal items etc.



R&TTE Directive 1999/05/EC

The O₂ X1i mobile phone conforms to all the essential requirements of the EU Directive 1999/5/EC (R&TTE) based on compliance with the following European Harmonised Standards:

EN55022:1998

3GPP TS 51.010 -1

EN60950:2000

EN61000 – 3-2 & 3-3

ETS EN 301 489-1/-7

EN50360 /361:2001

EN50082-1:1998

This product is marked with **CE** in accordance with the R&TTE Directive, 1999/5/EC Annex IV and is intended for use with in the EU/EFTA member states.

Austria, Belgium, Cyprus, the Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, The Netherlands, Norway, Poland, Portugal, the Slovak Republic, Slovenia, Spain, Sweden, Switzerland and United Kingdom.

Mandatory statements

We hereby declare that the O₂ X1i is in conformity to all the essential requirements of Directive 1999/5/EC.

Wir möchten hiermit bekanntgeben, daß das oben genannte Produkt in Übereinstimmung mit allen erforderlichen Bedürfnissen der 1999/5/EC Direktive steht

Certificamos que el aparato es conforme con lo establecido en las disposiciones de la Directiva 1999/5/CE.

Nous déclarons que le produit référencé ci-dessus satisfait aux exigences R&TTE 1999/5/EC qui lui sont applicables.

